# **SmartTrace® Application Instruction**



## STEP 1

Register the SmartWater product at www.smartwater.com/registration




#### STEP 2

Ensure all areas you plan to mark are clean and dry.




### STEP 3

Shake the bottle for approximately 10 seconds

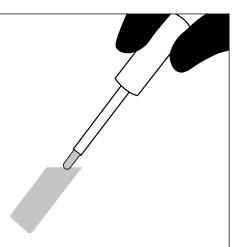

#### STEP 4

Insert the applicator into the bottle, collecting a small amount of liquid.

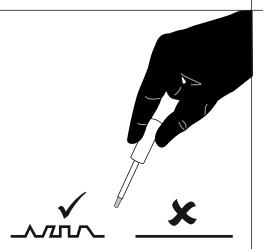

#### STEP 5

Suitable surfaces need to be uneven or irregular (avoid smooth surfaces)



#### STEP 6

After use, rinse the applicator under the tap and replace the cap securely to the bottle.



#### STEP 7

Place the supplied deterrent signage on windows and doors as well as on applicable marked property.

#### THINGS TO AVOID

- **DON'T** dilute your SmartTrace® Forensic liquid.
- **DON'T** write with the liquid.
- DON'T apply to smooth surfaces.
- **DON'T** apply to items when connected to the mains.
- **DON'T** apply the liquid in conditions in which frost can form.
- DON'T apply the liquid to functional parts such as electronic ports or displays.
- **DON'T** apply the liquid to moving parts.